

Quick Guide Bluetooth Music Receiver WM-BT48

Compatible with the following models:


- **Audi:** RNS-E, BNS 5.0, Concert 3, Chorus 3, Symphony 3
- **VW/Seat:** RNS-300, RNS-315, RCD-210, RCD-310 (nur mit blauem Display)
- **Skoda:** Beat, Cruise, Swing

Connect the adapter::

1. Remove the radio (you will find various instructions on the Internet).
2. Before you disconnect the plugs from the radio, make sure you have the radio code available to you, as you may need it for the radio after the power cut.
3. Insert the white Most plug of the adapter into chamber B (marked red in the picture). If this connection is already used by a white or blue plug, then you must manually transfer the contacts of the WM-BT48 into the OEM plug (take pictures beforehand so that the original pin assignment is not lost). The correct pin assignment of the AUX input (AUX IN) can be found in the pin assignment below or in the pin assignment on the housing of your radio. If an AUX socket is present in the vehicle, this connection is no longer usable, since the input is used by the WM-BT48. A paper clip or a fine screwdriver is perfectly suitable as a tool.

VW RCD pin assignment

The designation may differ for Audi

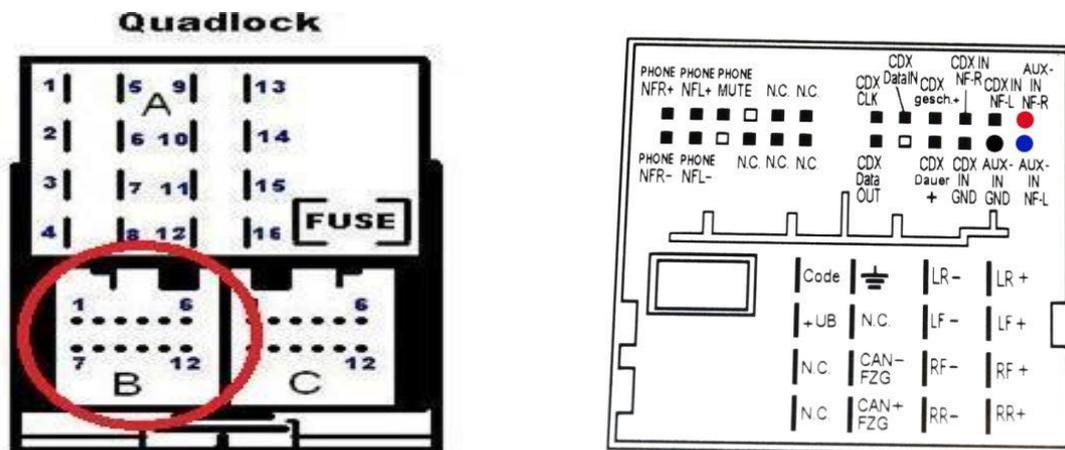

4. Now connect the black ground cable to the radio housing or the black line directly to a ground line to the radio connector (pin assignment GND symbol, next to the code). Here you can also use a clip. Without a good ground connection the function of the adapter is not given.
5. Now connect the red cable (ignition plus +12V) to a switched +12V cable. Since this cable is no longer available behind the radio, the voltage can be taken from the cigarette lighter, the fuse box (terminal 15) or the air conditioner (measurement with multimeter necessary). Ignition on = +12V present / ignition off = 0V present.
6. Establish a Bluetooth connection by enabling Bluetooth pairing and searching for the Bluetooth device "WM". You should then set the volume on the connected mobile device to maximum.
7. Before reinstalling the radio, test the function of the adapter. Switch on the AUX function using the AUDIO or MEDIA button on the radio.

For Info!

The AUX function must be selectable or activated!

If AUX under AUDIO is not displayed at Audi or MEDIA at VW, the activation/encoding of the AUX input at the dealer or in the workshop is necessary, otherwise the adapter is not recognized.

Anything unclear? You can reach us MO-FR, from 8-17 o'clock by e-mail: technik@watermark-germany.de