


Quick Start Guide Bluetooth Music Receiver WM-BT07

Compatible with the following models:

- **AUDI:** CQ-JV1060L, RNS-E (16:9), BNS 5.0, Chorus 3, Concert 3, Symphony 3
- **VW:** MCD, MFD2-RNS 2, MFD2 DVD-RNS2 DVD, R110, R100, RNS 300, RNS 500, RNS 510, RCD 200, RCD 210, RCD 300, RCD 310, RCD 500, RCD 510, Delta 6
- **SKODA:** Nexus (16:9), Columbus, Stream, Cruise, Rhapsody
- **SEAT:** Navigation (16:9), Audiosystem CD03, Altea CD01, Altea CD02

Connect the adapter:

1. Remove the radio.
2. Before disconnecting the plugs from the radio, make sure that the radio code is available to you, as you will need it for the radio after the power cut.
3. Insert the plug of the AUX-IN adapter WM-BT07 from the back of the Quadlock plug into the chamber B until it snaps into place. This should also go if the Quadlock plug is still in the radio (turn off radio before plugging in the adapter). If the cables are short or you can see bad the back of the plug, you can also solve the Quadlock plug completely from the radio.

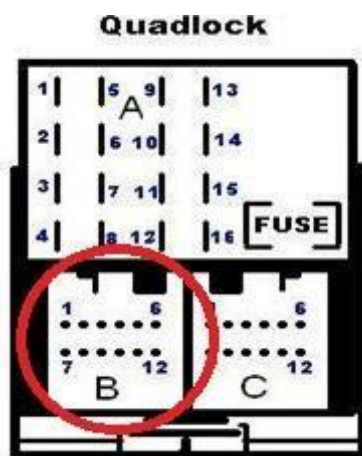

4. Now connect the black earth cable with the ring eyelet either to the radio housing or the black cable directly to a ground line to the Quadlock plug. Without a good ground connection, the function of the adapter is not given.
5. Connect an audio source by enabling Bluetooth pairing and searching for the device WM. The volume on the paired device should then be set to full volume.
6. Before reinstalling the radio, test the function of the adapter. To do this, select the CD changer.

Has something been left unclear? You can reach us MO-FR, from 8-17 o'clock by e-mail: service@watermark-germany.de