

## Quick Start Guide Bluetooth Music Receiver WM-BTMIC36

Compatible with the following models:

- A-Class (W169, C169) 09/2004 - 04/2012
- B-Class (W245, T245) 02/2005 - 11/2011
- Sprinter 2 NCV3, W906 05/2006 - 07/2014
- Vito, Viano (W639, V639) 04/2006-07/2014
- VW Crafter 04/2006 - 03/2014


Only with the following factory head units:

- Manufacturer: Becker or Harman&Becker
- Type: Audio 5 / Sound 5
- Model No.: BE4602 / BE9012 / BE7076 / BE7077 / HA1111

### Connect the adapter:

1. Remove the radio (you will find various instructions on the internet).
2. Before disconnecting the plugs from the radio, make sure that the radio code is available to you as you will need it for the radio after the power cut.
3. Insert the blue connector of AUX Adapters into the socket C3 of your ISO socket behind the radio. (red circle in the picture) and connect the jack plug to the jack socket (AUX) on the WM-BTMIC36.
4. If necessary, remove the blue connector from the yellow-green-blue connector combination and attach the blue connector of the WM-BTMIC36 instead.
5. With a CD changer already connected in socket C3 (blue), it is thus removed and can no longer be used in the system.
6. If in your model are installed a black 20-pin connector, you will also need the adapter WM-4693 (Mini-ISO adapter / extension). This can be ordered in our online shop at [www.watermark-germany.de](http://www.watermark-germany.de).
7. Position the microphone near the driver in the vehicle (steering wheel trim, instrument panel, etc.). Lay the cable and connect the jack plug to the jack socket (MIC) on the WM-BTMIC36.

**Avoid placing the microphone in the immediate vicinity of or on airbags!**

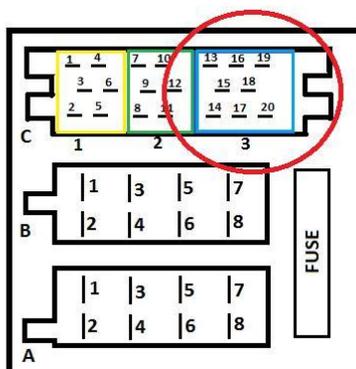

8. Now connect the black ground cable to the radio housing or the black cable directly to a ground lead to the head unit connection (mostly brown thick cable). Without a good ground connection, the function of the adapter is not given.

9. Now connect the red cable (ignition plus + 12V) to a switched + 12V line. Since these are usually no longer available behind the radio, you can take the voltage, for example from the cigarette lighter or the air conditioner (measurement with multimeter necessary). Ignition on = + 12V are on / Ignition off 0V are on.
10. Establish a Bluetooth connection by activating Bluetooth pairing and searching for the WM Bluetooth device. You should then set the volume to full volume on the connected device.
11. Before reinstalling the radio, test the function of the adapter. Switch on the AUX function with the CD button.

### **AUX erscheint nicht im Display:**

1. Switch on the device (on the device), ignition remains off.
2. Sound setting button (leftmost button) and button 4 Press until "TEST MODE" AUDIO 5 or SOUND 5 appears in the display.
3. Release the keys and press the arrow key upwards until AUX OFF or EXT OFF appears.
4. Turn the volume control until EXT AUX or EXT ON appears.
5. Scroll up to confirm with the arrow key until END appears or CD key.
6. Switch off the device
7. Switch on the device via ignition. AUX is unlocked!

### **For Info!**

The blue cable on the mini-ISO connector is a remote cable or power connector for an active antenna. If this pin is factory-set in the wiring harness, then the connection must also be restored here.

Has something been left unclear? Contact us by E-Mail: [service@watermark-germany.de](mailto:service@watermark-germany.de)